




TENT SET UP INSTRUCTIONS

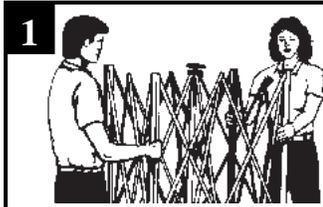


1 Place your tent frame in the center of the area to be sheltered. With a partner on the opposite side, grasp the outer legs. Slightly lift the tent off the ground and step backwards. Stop when the tent is $\frac{3}{4}$ of the way open.

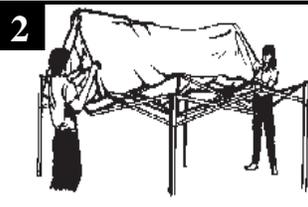


2 Unfold the fabric top and place it over the frame. Align the four corners of the top to the four corners of the frame. Use the Velcro to attach it securely.

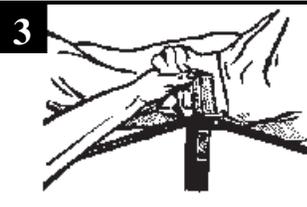

3 Attach the corners first by lining up the Velcro on the corner of the tent with the Velcro on the corner of the frame.

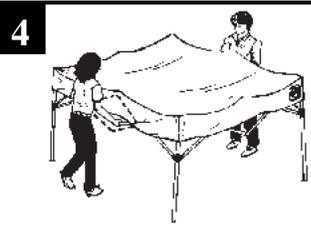

4 Grab the bottom of the diamond shaped area of the trusses with your partner opposite of you. Lift up and step backwards until the frame is fully opened. **BE CAREFUL NOT TO PINCH YOUR FINGERS!**

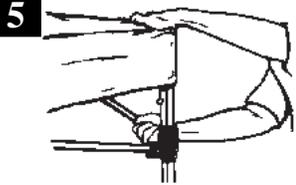

5 Slide the corner leg brackets up until they lock into place by pushing the bracket up with 1 hand while holding down the top of the leg with the other hand. You will hear a "click" when it locks into place. Pull the top down over the bracket. Repeat on the other 3 corners.



6 Adjust the legs to the desired height by stepping on the footpad and lifting the leg up until it clicks into place. Repeat for each leg. There are multiple height adjustments that can be made by pressing the release lever and lifting the leg until the next click.



7 Optional Side Rail hardware consists of 3 metal bars that fit together to form a 10' span. Simply assemble the bars, slide the fabric skirt over the bar, and clamp the bar to the frame using the included bar clamps.

IMPORTANT

Windy Conditions: Use stakes or weight bags.


Heavy Wind: Take tent down.

Rain: Do not leave shelter unattended.


TAKING DOWN YOUR TENT



1 Press the lever on the leg bracket to release the locking pin and slide the inner leg up. Repeat on the other 3 legs.

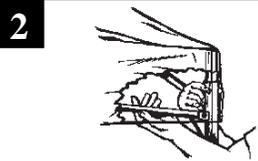

2 Press the lever on the corner bracket to release the locking pin. Repeat on the other 3 corners.

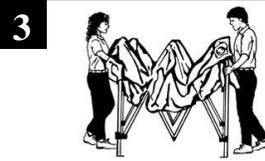

3 With a partner on the opposite side, grasp the outer legs above the corner brackets. Slightly lift the tent off the ground and step towards your partner. As the frame collapses, pull up on the top where the frame cross bars come together so the top does not get pinched.

Care & Storage

Storage: Use cover bag when not in use

Cleaning: Use a mild liquid dish soap and lots of water.

Wet Fabric: Let tent fabric dry completely before closing.

****Note: Top and frame are shipped separately to avoid damage. First time set up requires you to attach the tent top to the frame. Once the initial set up is done, set up and take down are easily accomplished in seconds!*